

**WP-0003**  
**10/01/2003**

# Change Transmission Gear Oil 50/70/90cc Models

## Changing Transmission Oil

1. Place an oil catch pan under the unit directly below the transmission box.
2. Remove the transmission box drain plug located on the bottom of the transmission box on the underside of the unit.
3. Remove the transmission box fill hole plug located on top of the transmission box near the oil tank bracket on the left hand side of the unit.
4. Allow the oil to drain completely (15-30 min).
5. Reinstall the drain plug and tighten. Torque to 7-10lbf-ft
6. Fill the transmission box with of SAE 80-90 gear oil
7. Transmission Capacities are as follows;
  - 50cc Engine = 100cc / 3.4oz
  - 70cc Engine = 100cc / 3.4oz
  - 90cc Engine = 100cc / 3.4oz
  - 90cc Engine with Reverse 300cc / 10.2oz
8. Reinstall the fill hole plug finger tight.
9. Dispose of used oil at a proper recycling station as required by law.

