





13.6 Engine Will Not Start (Start motor turns)

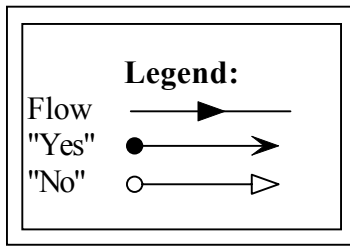


Engine Does Not Start

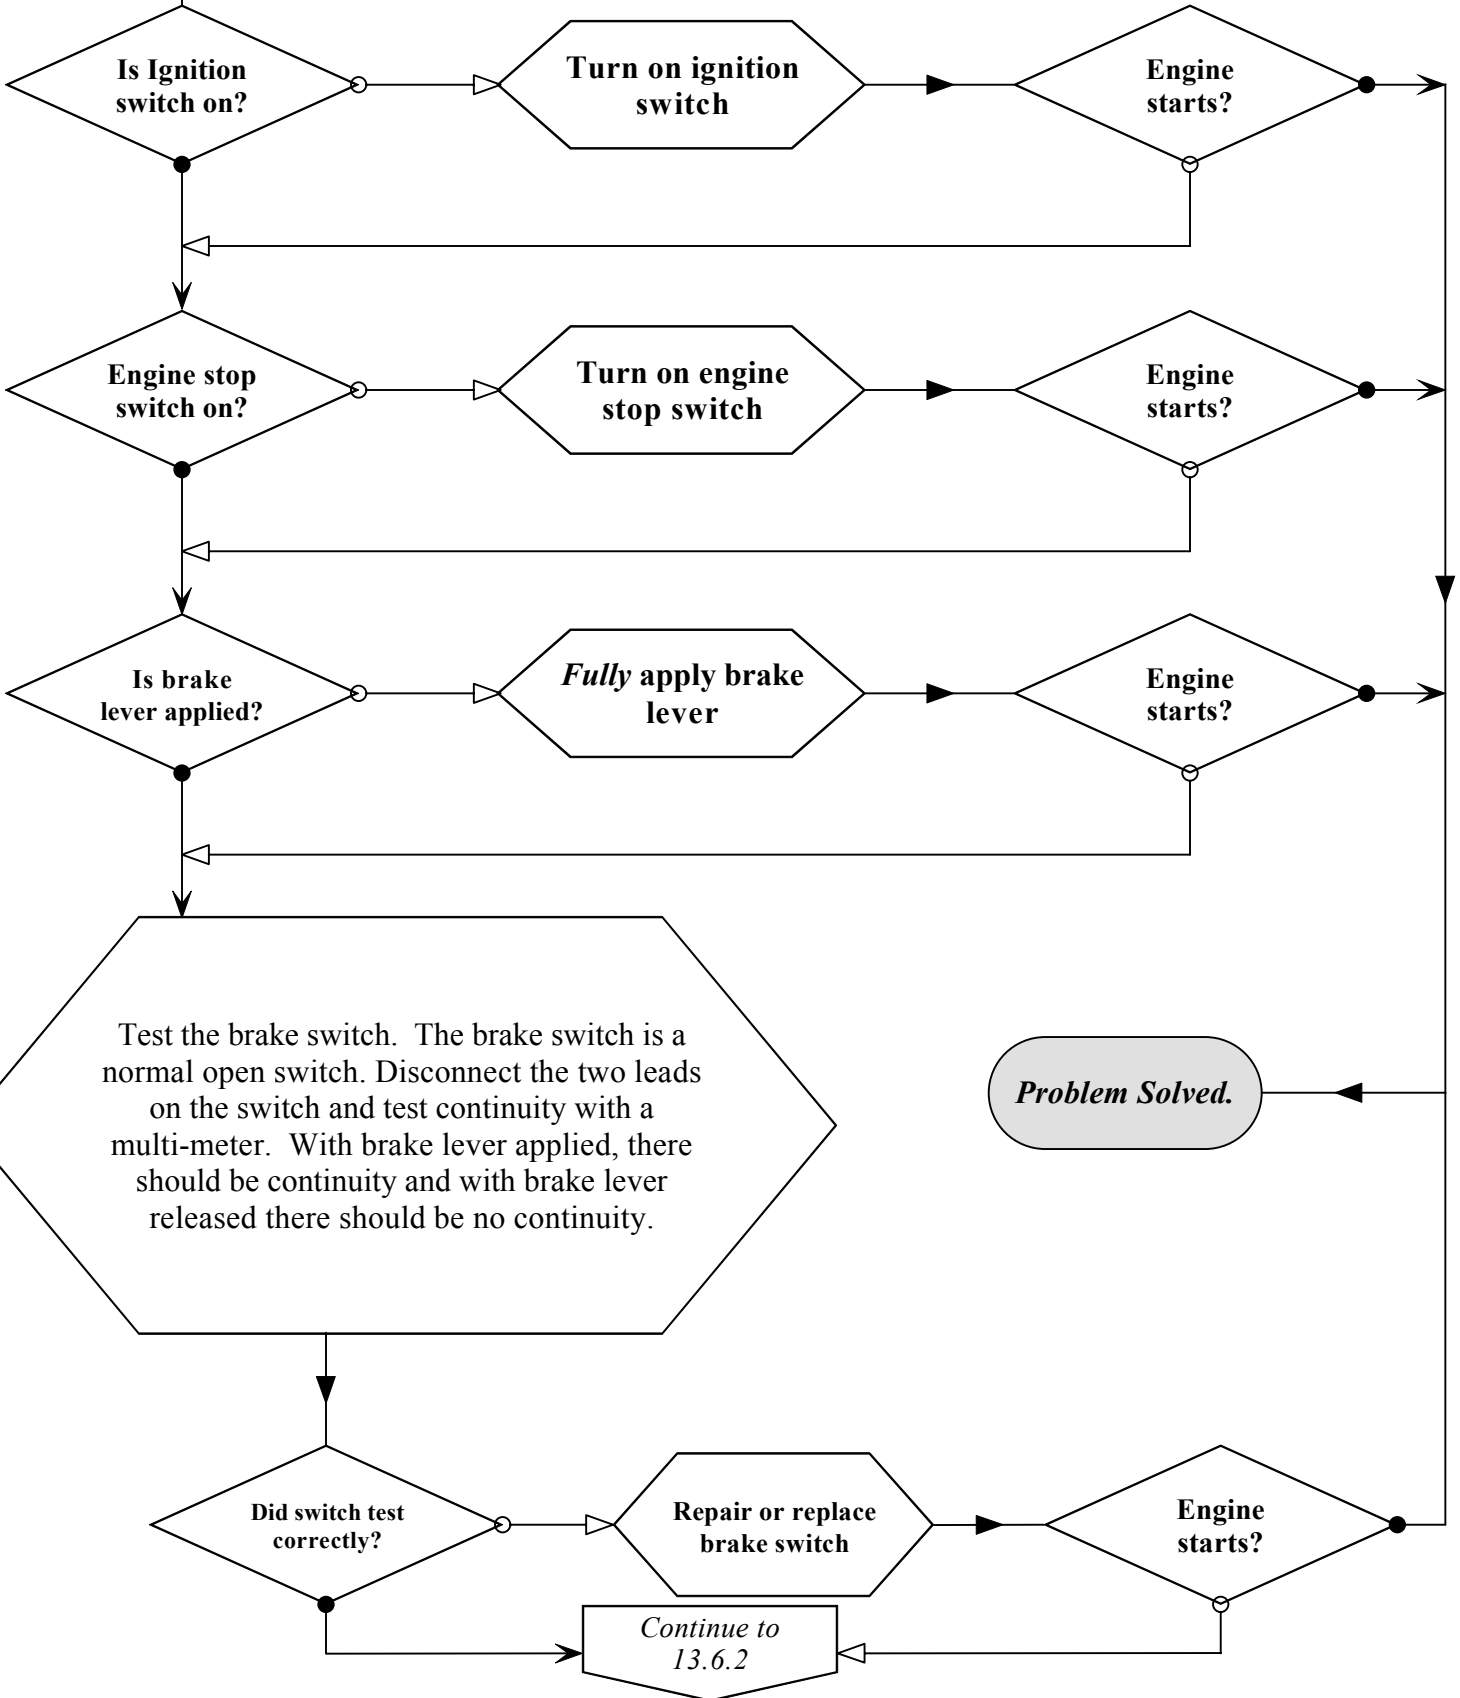


13.6.2 Engine Will Not Start, continued

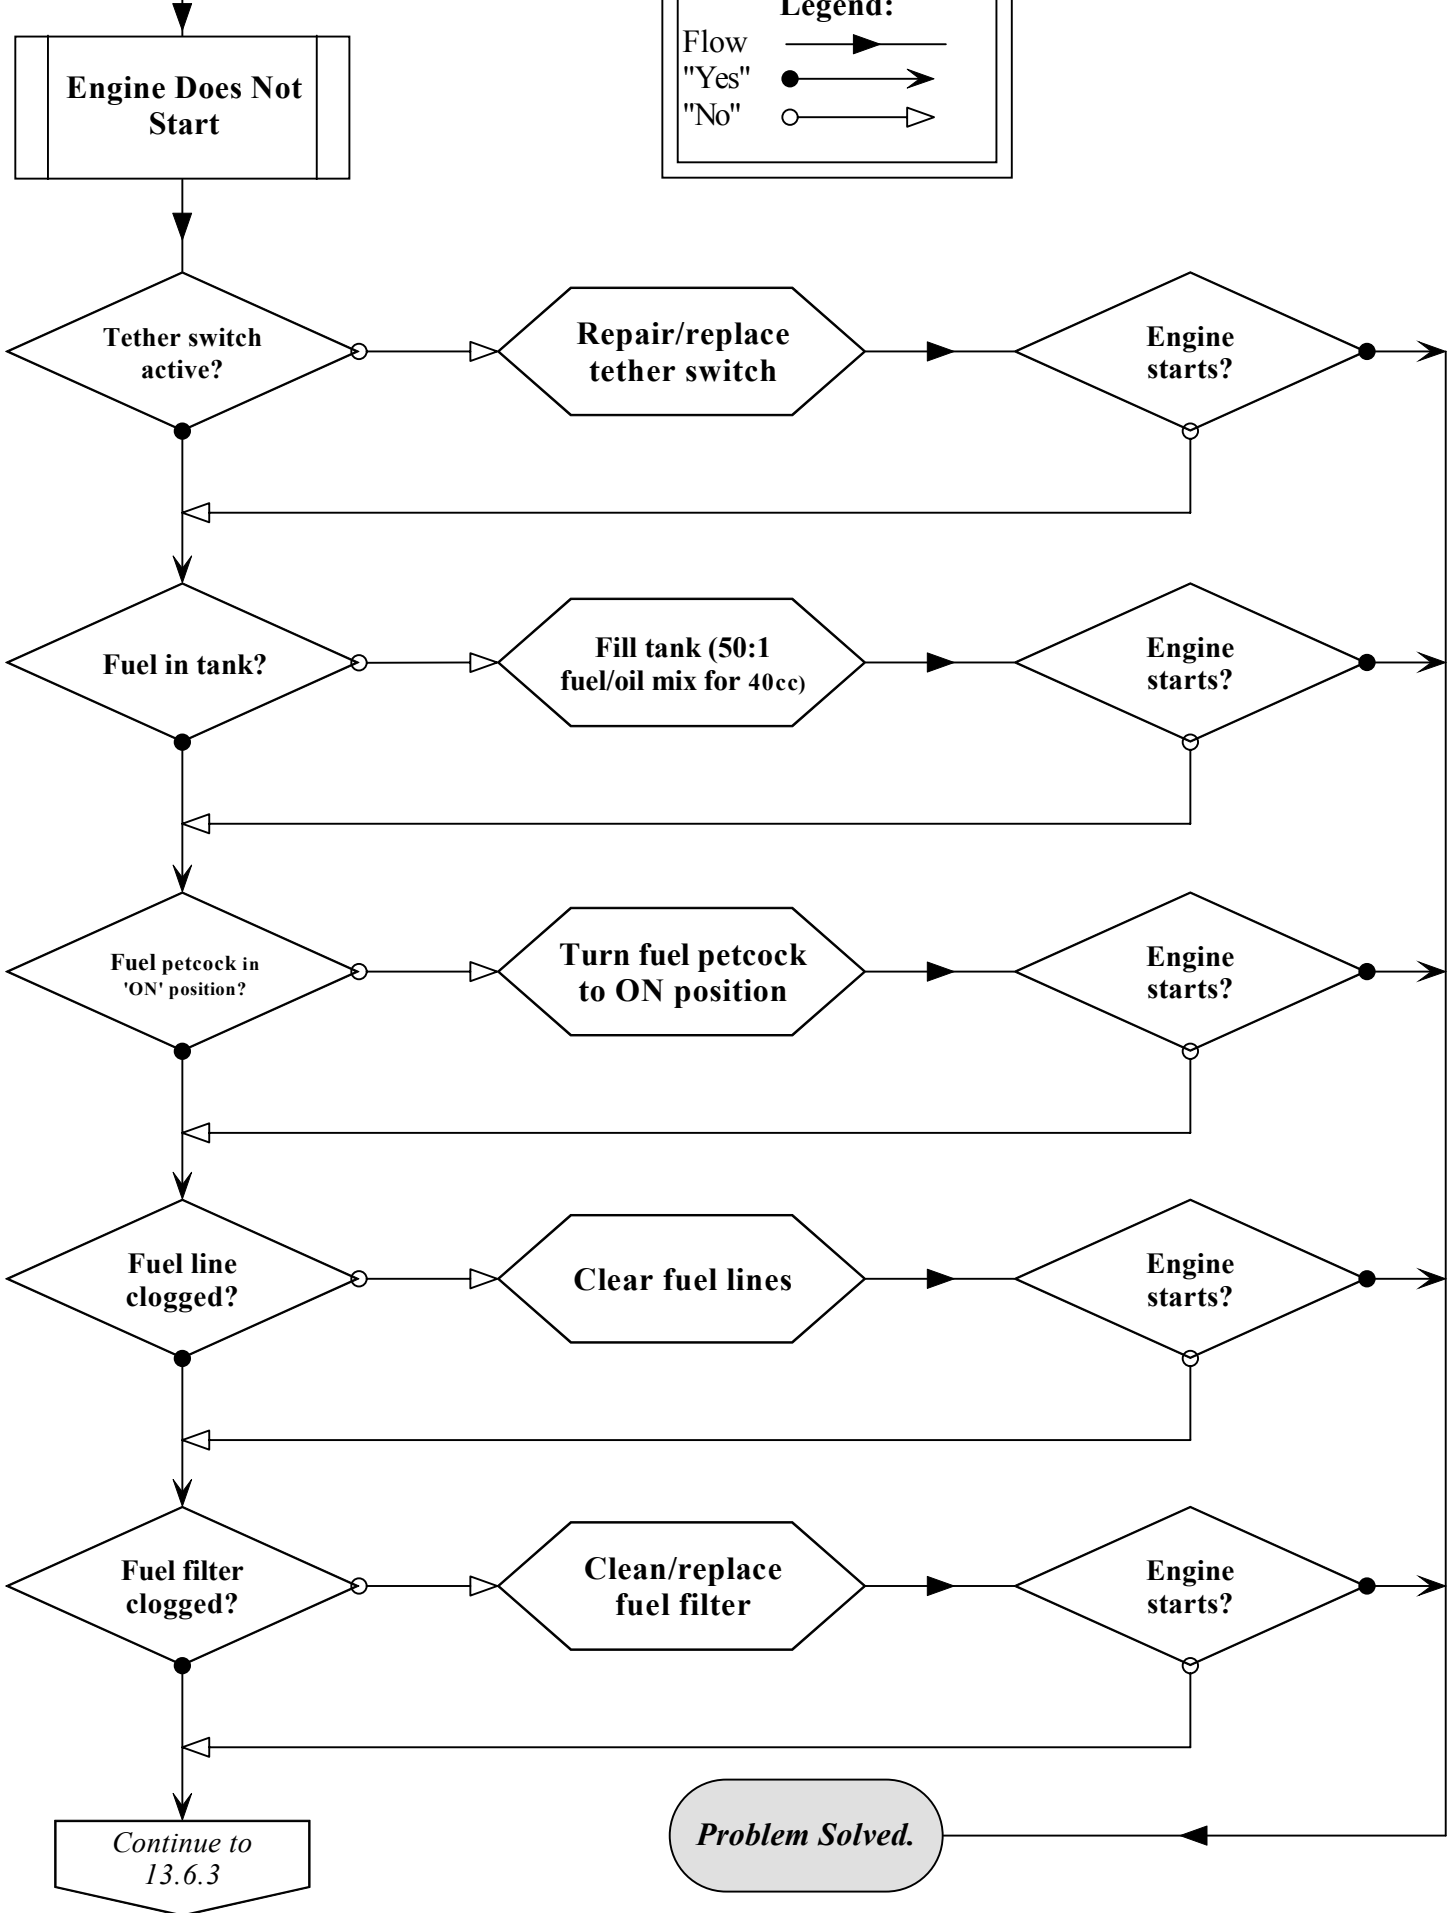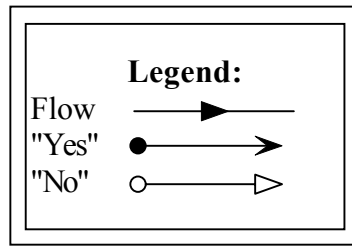



13.6.3 Engine Will Not Start, continued

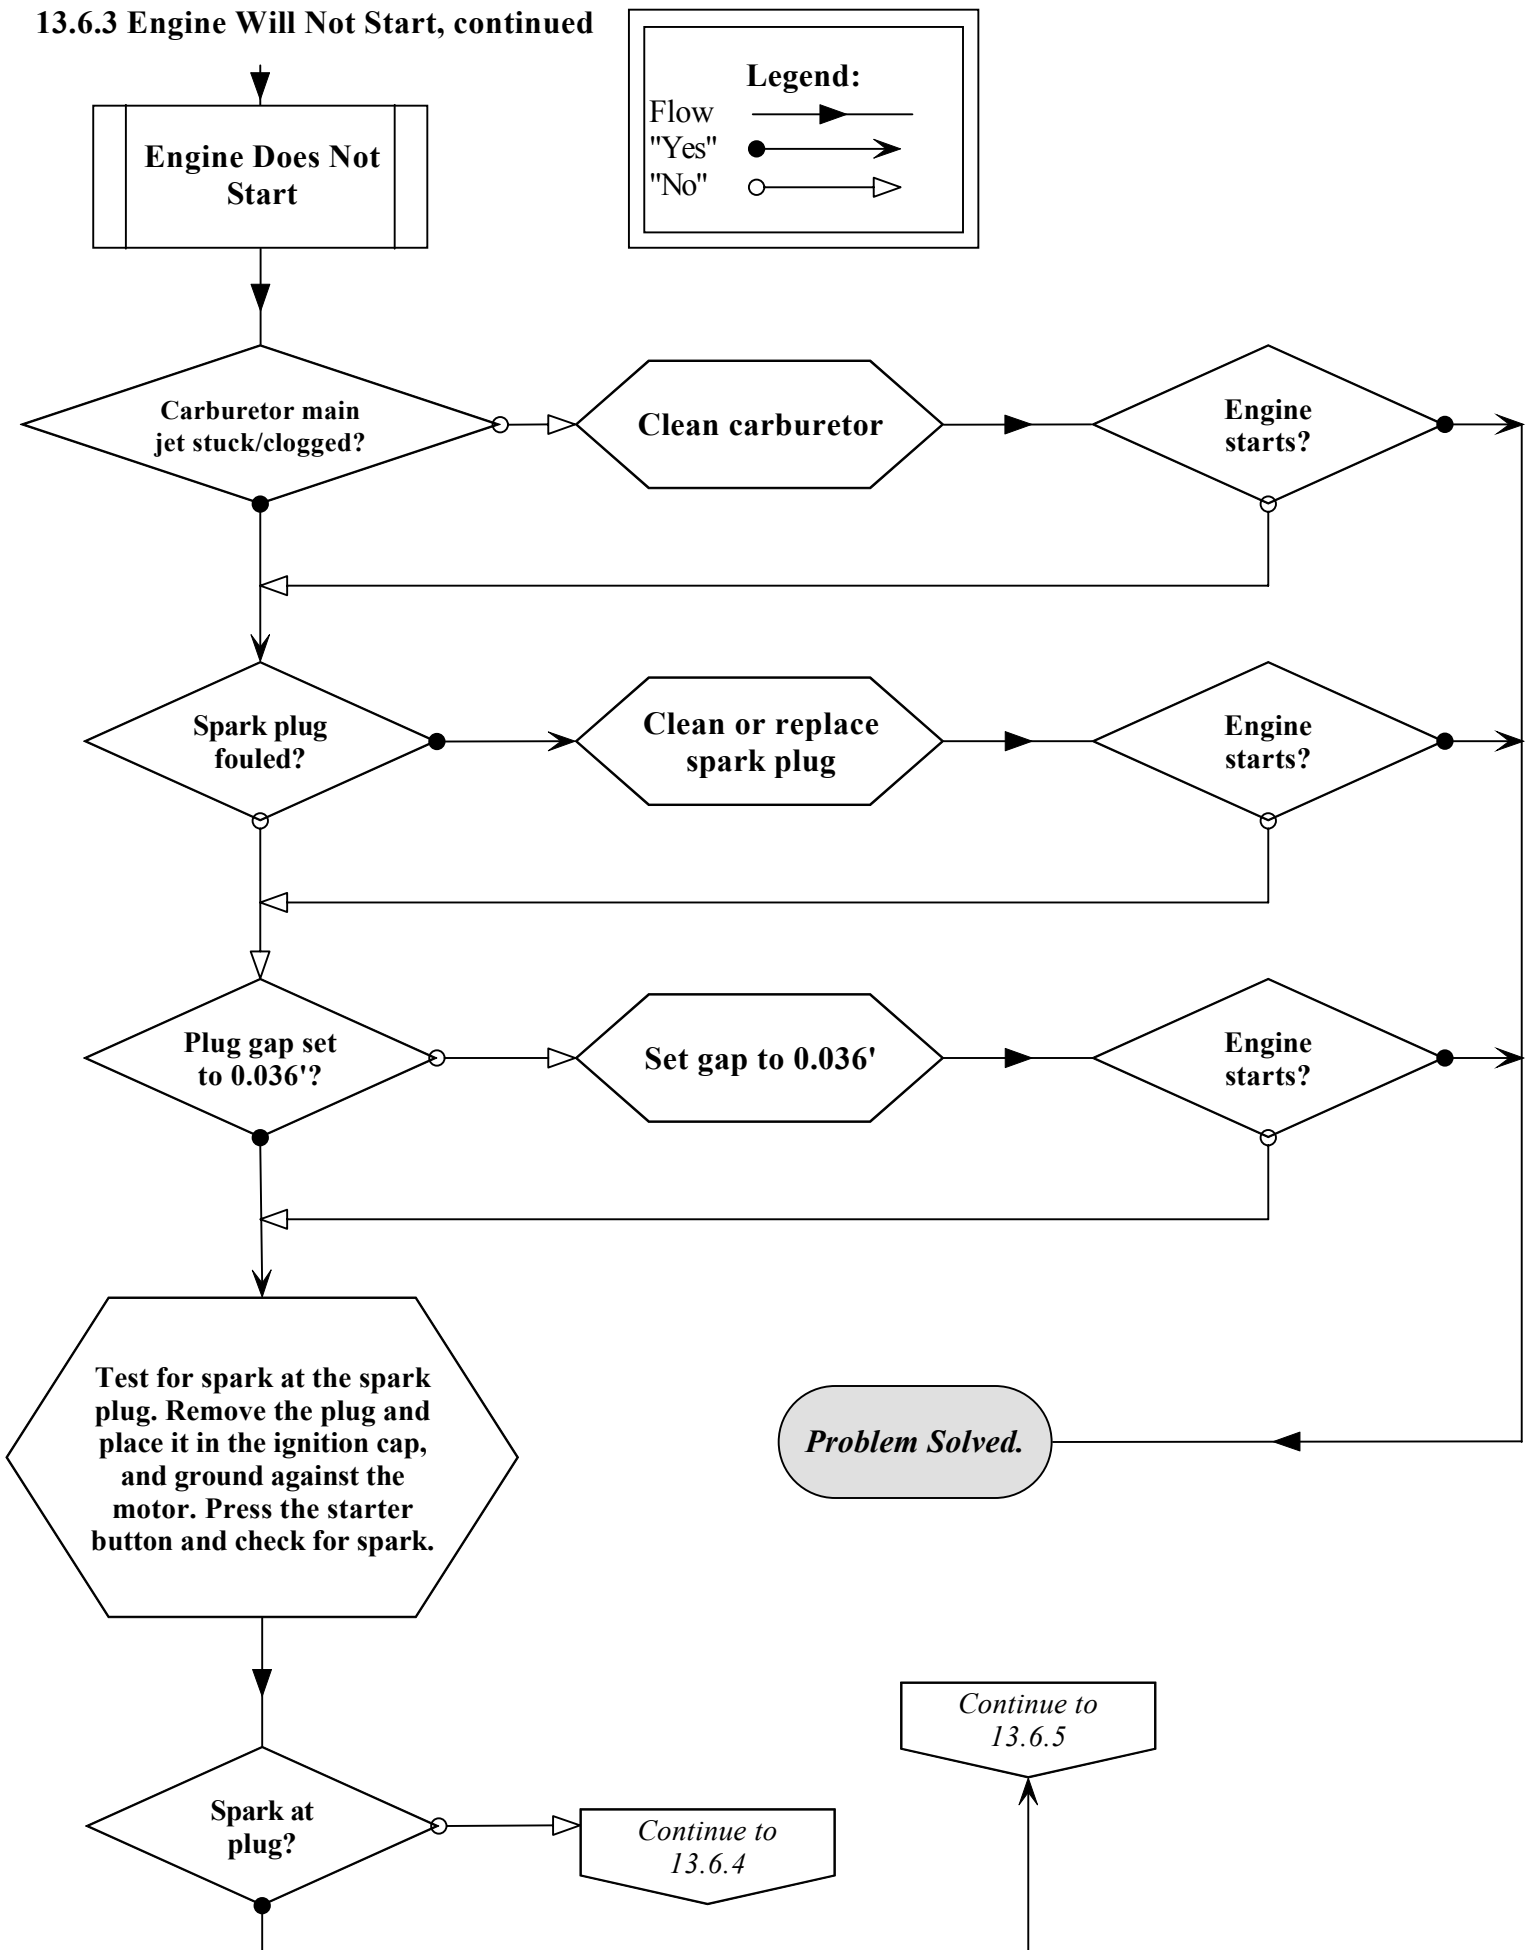

13.6.4 Engine Will Not Start, continued

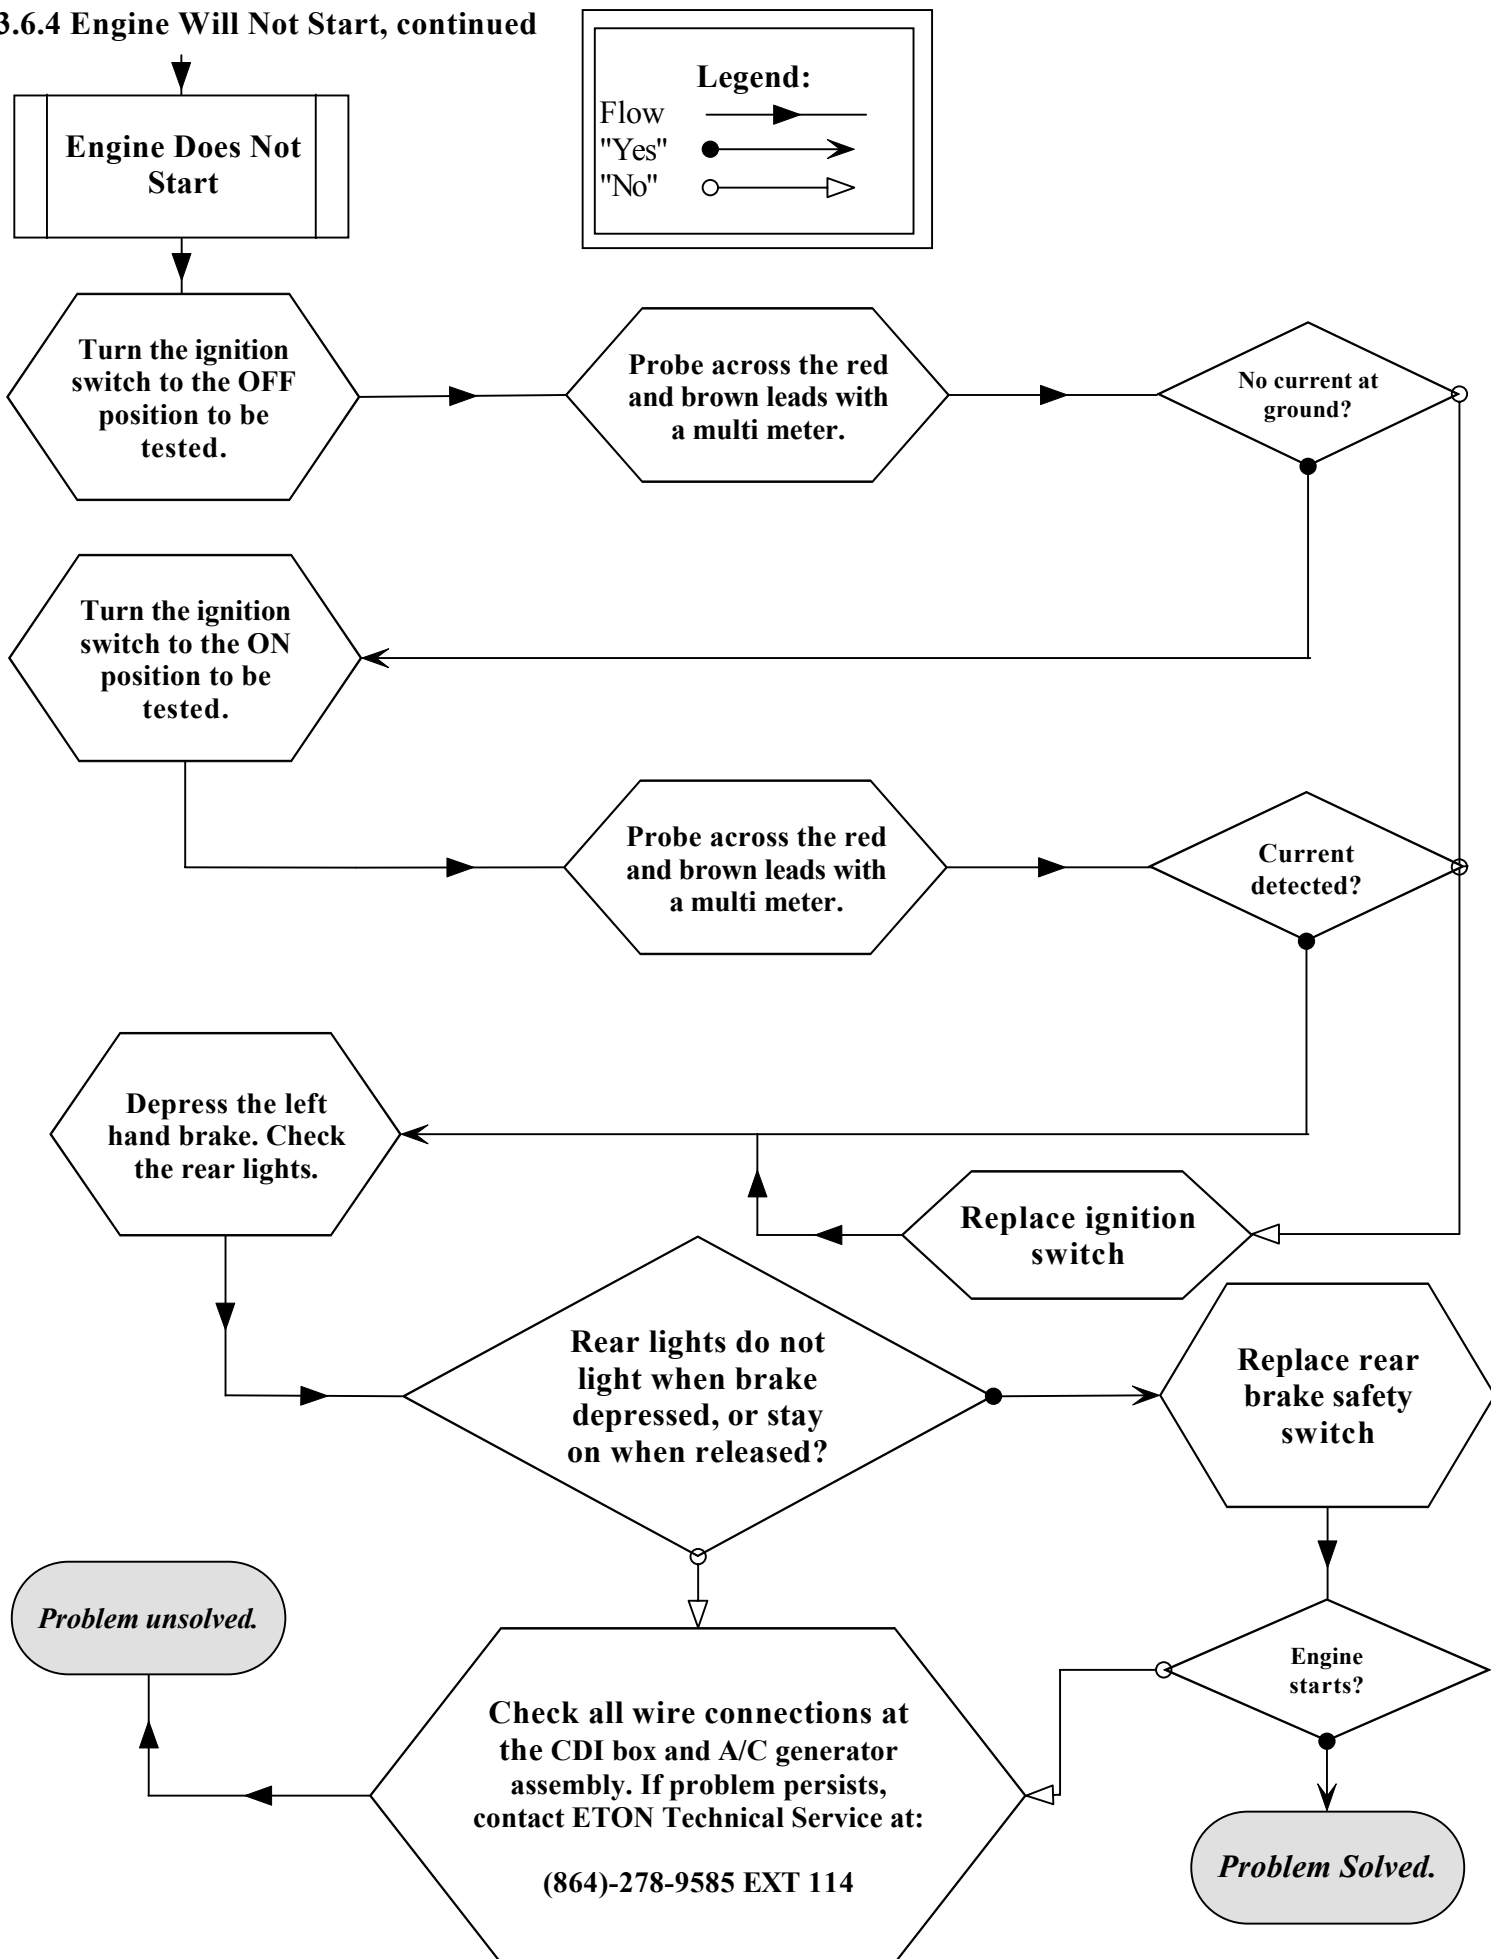

13.6.5 Engine Will Not Start, continued

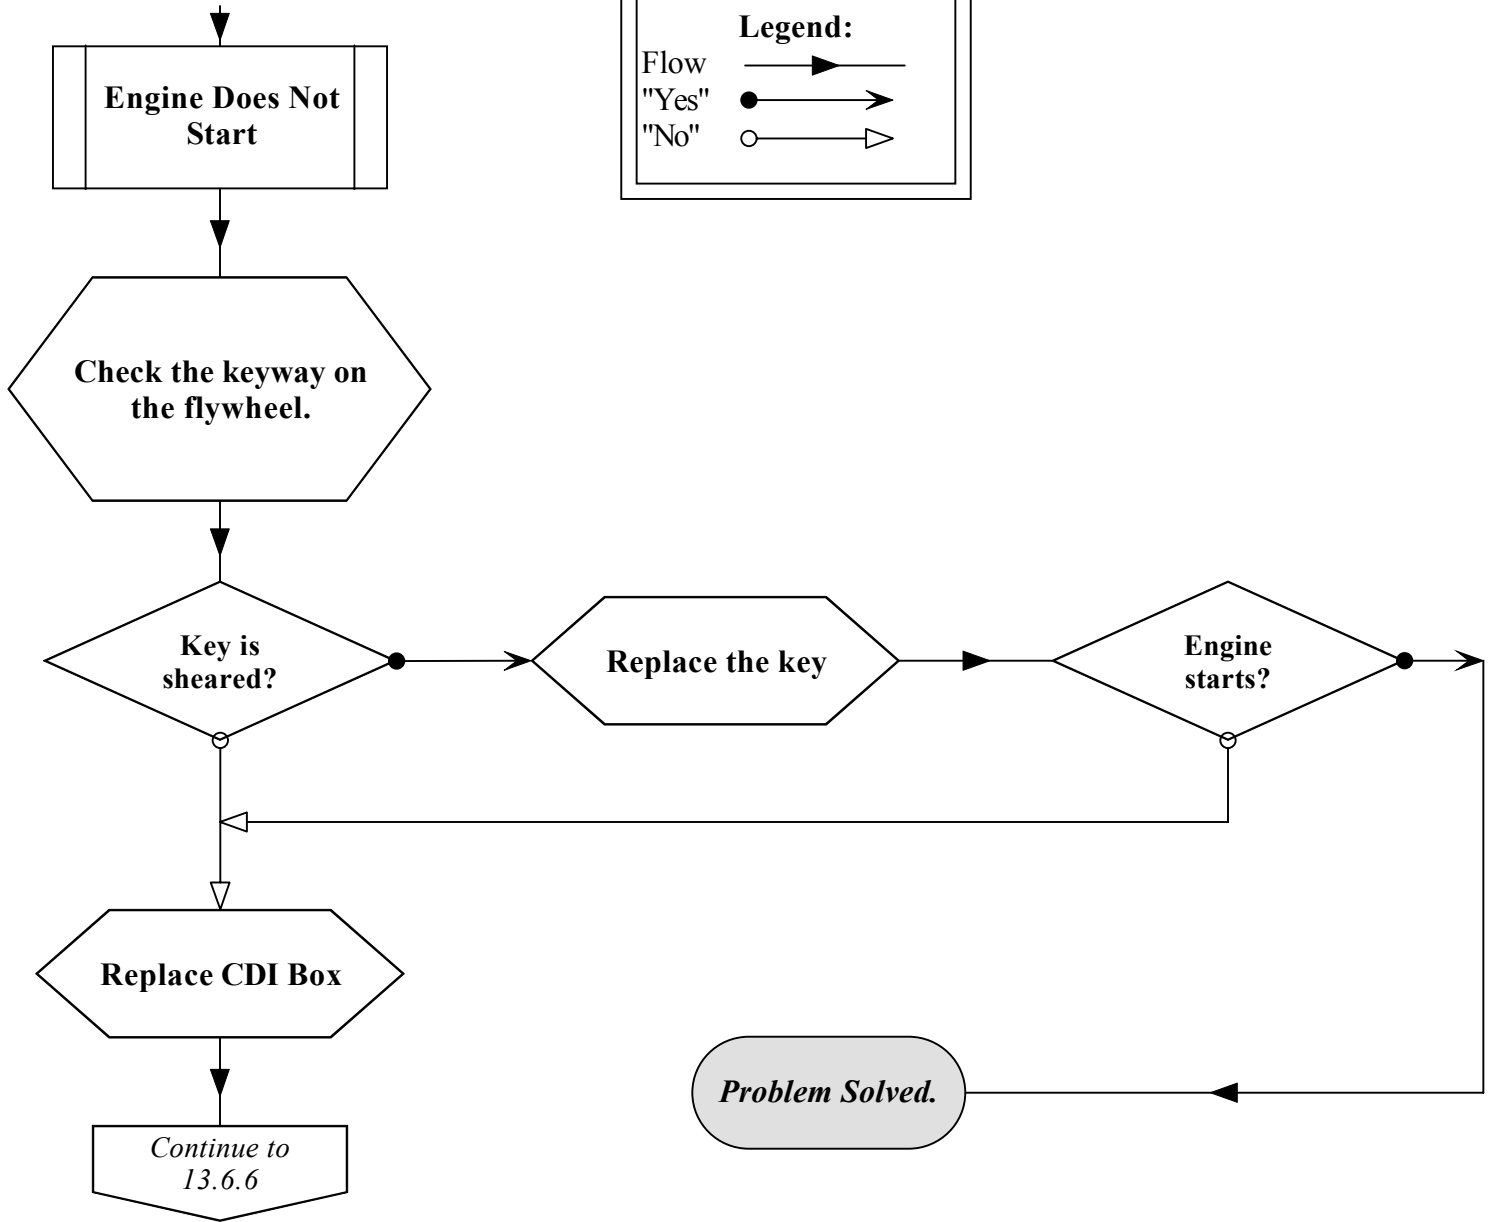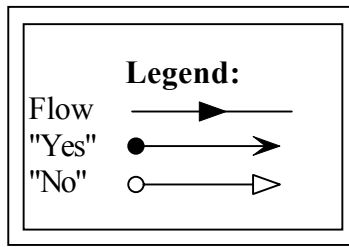

13.6.6 Engine Will Not Start, continued

